BITZEE HAMSTER BALL™

SUPER BITZEE FRIENDS™

BITZEE

SPIN MASTER

TM & © 2025 Spin Master Ltd. All rights reserved.
Bitzee™ Patent information: patents.spinmaster.com

1 GET STARTED

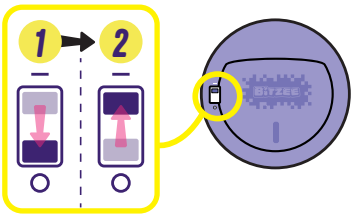

Turn toy off and on again to exit Try-me.

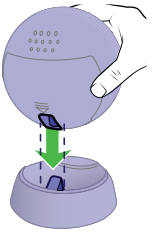

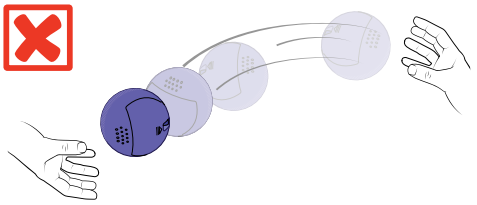

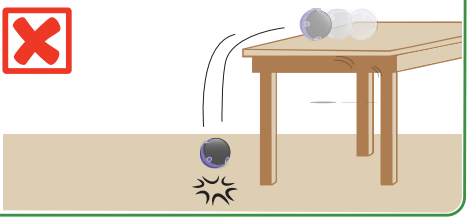

2 TUTORIAL: LEARN TO PLAY

Learn to play with your Bitzee by following the tutorial on screen.

TOUCH

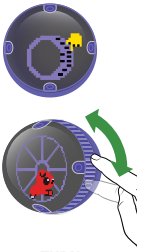

TURN



TILT

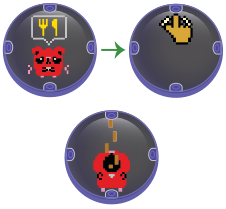

Attend to a need

PRESS dome to enter Menu options

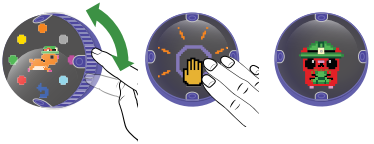

TURN wheel to find Explore icon and PRESS dome to select

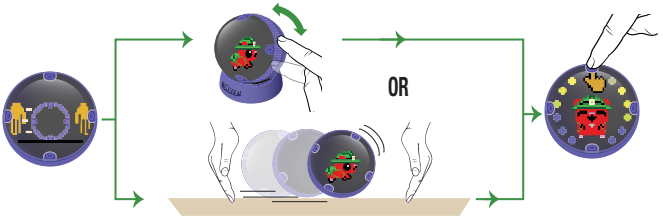

TOUCH

Complete the tutorial steps! Once you finish the tutorial, you are ready to play!

TO RETURN TO HOME SCREEN, PRESS AND HOLD DOME FOR 2 SECONDS.

3 MAIN MENU

When playing with a Bitzee, PRESS dome to enter Menu.



TURN wheel to rotate through icons.

PRESS dome to select.

TOUCH bottom button to select Back icon and exit Menu.



EXPLORE
Press dome to enter Explore mode, then roll on tabletop or spin wheel to run. Find treats, items or friends!

PHONE
Press to select and play with friends.

LOVE METER
See how close your selected Bitzee is to evolving.

CUSTOMIZE
Select T-shirt icon to create a custom look and add to your look book.

SETTINGS
Press to go to Settings Menu.

GAMES
Press to play games with your friends! Unlock more games as you evolve.

BACKPACK
Press to view items you find in Explore mode.

FEED
Press to feed your Bitzee.

4 EXPLORE TO EVOLVE

EXPLORE TO DISCOVER - Find Explore mode in Menu and roll ball to find new treats, items and friends!

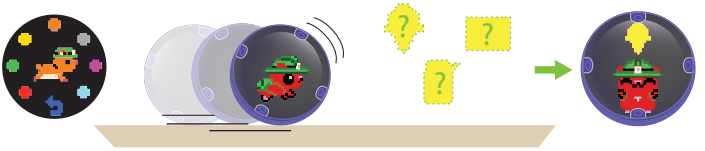

EVOLVE - Explore to fill the Love Meter and your Bitzee will evolve!

Bitzee will evolve to the next stage when you've found all their friends, treats and items!

Baby → Teen → Super Bitzee!

5 NEEDS MESSAGES

Your Bitzee will send a message if they need something.
Don't ignore these or your Bitzee will refuse to use their phone, play games or customize.
They will continue to tell you what they need until you give it to them.

FEED - Bitzee is hungry. Touch top to feed them.

BATH - Bitzee needs a bath. Touch top to clean them.

WATER - Bitzee is thirsty. Touch top to give them a drink.

POOP - Bitzee pooped. Turn wheel to help them.

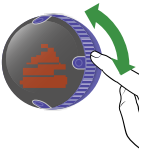

EXPLORE - Roll ball or turn wheel to explore.

LOVE - Bitzee needs love. Touch left or right and hold.

6 EXPLORE & FIND

Treats and Items are stored in your Backpack. Play with them anytime!

FRIENDS
Can be found in your Phone. Visit them anytime!

7 FRIENDS & THEIR NEEDS

When a friend needs you, touch top to visit the friend.

Tap, shake, lift, tilt, or turn the wheel to play with your friends!

Turn wheel to ignore.

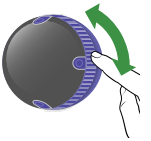

To fulfill ignored friend's needs, find friend in your phone and select them.

IGNORED MESSAGES

If you ignore a friend, they will block you and eventually run away. You will have to find them again.

8 CUSTOMIZE

Turn wheel to view options and press dome to select.

Select the Dress-up icon to customize your hamster.

ACCESSORIES & OUTFITS

Unlock new outfits when you evolve!

LOCATIONS

TAKE PICS!

Scroll the wheel to pick a pose and press the dome to take pictures.

Select the Photo icon to view your look book.

Turn the wheel to scroll through your looks!

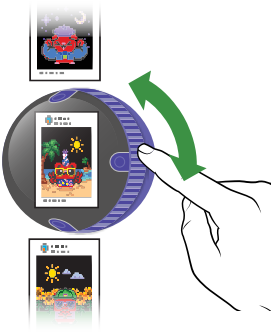

9 GAMES

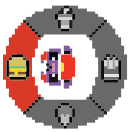

'FAST FOODIE'

- Remember food order, then turn wheel and press dome to select matching food station.
- Touch top to put burger on grill. When the burger darkens in color and two big puffs of smoke rise, touch top to flip. Touch top again to put it in the bun.
- Keep turning the wheel to fill the ice cream cone.
- Touch top to put fries in the frier.
- Turn wheel to choose soda color, then hold top until the cup is full.

‘TURBO TRIKE’

- Turn wheel to avoid obstacles and go down the holes to enter the next level.
- To avoid wide obstacles, keep turning wheel to the right or left to spin all the way around.

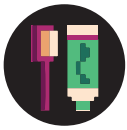

‘LOOSEY TOOTHY’

- Turn wheel, then press dome to select tooth.
- When tooth is YELLOW, select the YELLOW toothbrush to brush it.
- When the tooth is GREEN, select the GREEN drill to drill it.
- Drilled teeth will be BLACK. Select the BLUE fill to fill them.

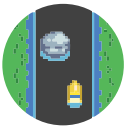

‘BOATLOAD EXPRESS’

- Turn wheel to avoid obstacles and deliver package to matching colored house.
- To deliver to the house that matches the package color, drive the boat on the same side of the river as that house.

‘SPACE STORMER’

- Turn wheel to fly your ship and press dome to fire at and destroy meteors so they don’t hit you.

SETTINGS MENU

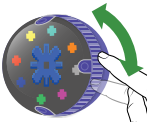

Press dome for Menu options. Turn wheel until you see the Settings icon. Press dome to select.

VOLUME
Turn wheel to adjust volume level. Press dome to select.

GO BACK
Press dome to exit Menu.

⚠ **CAUTION** – THIS ACTION CAUSES A FACTORY RESET AND ERASES ALL EXISTING PLAY HISTORY.

RESET BITZEE
Press and hold dome until the countdown finishes and you hear the alarm sound effect. Your Bitzee is now reset to the on-shelf demo.

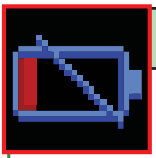

REPLACE BATTERIES

LOW BATTERY WARNING

Before replacing batteries, turn Bitzee off, or your progress may be lost.

⚠ **WARNING:** This toy produces flashes that may trigger epilepsy in sensitised individuals. To reduce exposure to such potential, play in a well-lit room, and do not flash lights directly into eyes.

⚠ **WARNING:** This toy contains inaccessible magnets. Exposed magnets, if inhaled or swallowed can stick together or to other metal objects, and can cause serious or fatal injury. Keep away from electronic and medical devices.

Spin Master Ltd., 225 King Street West, Toronto ON M5V 3M2 Canada
Spin Master Inc., PMB #10053, 300 International Drive, Suite 100, Williamsville, NY 14221
Spin Master International B.V., Kingsfordweg 151, 1043 GR Amsterdam, NL
Spin Master Australia Pty Ltd, Level 9, 205 Pacific Hwy, St Leonards, NSW 2065
Spin Master Toys UK Ltd. Meridian House, Fieldhouse Lane, Marlow, Buckinghamshire, SL7 1TB, UK

WWW.SPINMASTER.COM

Patent information : patents.spinmaster.com.
TM & ©2025 Spin Master Ltd. All rights reserved.

⚠ **WARNING:** CHOKING HAZARD – Small parts. Not for children under 3 years.

MADE IN CHINA

T22908_0002_20151496_GBL_PTW_R1_EN